


Playing

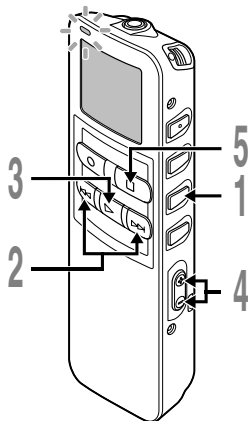

1 Press the FOLDER button to choose folder.

2 Press the FF or REW button to choose the file that you want to play.

If you keep pressing the FF or REW button in stop mode, the recorder continuously skips to the beginnings of files.

3 Press the PLAY button to start playback.

The record/play indicator lamp glows green.

- (a) Current playback time
- (b) Total recording time of the file being played

4 Press the VOL (+) or VOL (-) button to select the proper sound volume.

The display shows the volume level. You can choose between 0 to 30.

5 Press the STOP button at any point you want to stop the playback.

Resume playback by pressing PLAY button again.

